

Gauge pressure transducers

Series/Type: AK2 series Ordering code:

Date: 2009-08-03

Version: 3

 $\odot$  EPCOS AG 2009. Reproduction, publication and dissemination of this publication, enclosures hereto and the information contained therein without EPCOS' prior express consent is prohibited



## Gauge pressure transducers

**AK2** series

## **Description**

- The transducers are based on piezoresistive silicon pressure sensors from our own clean room.
- The robust stainless steel/plastic casing is accentuated through its excellent mechanical decoupling.

## **Features**

- Piezoresistive MEMS technology
- Measured media:

Air, non-aggressive gases (gas humidity 0 ... 100% r.h.) and non-aggressive fluids.

Unsuitable for substances which react with glass, silicon, stainless steel, silicone glue ( $p_r \le 10$  bar) or epoxy glue ( $p_r > 10$  bar).

- Whetstone bridge with mV output, proportional to pressure and ratiometric to supply voltage
- RoHS-compatible, halogen-free
- Dual-in-line package for PCB mounting






### **Dimensional drawings**

Type KD (4.8 mm tube fitting)

Type KC (M5 thread connection)

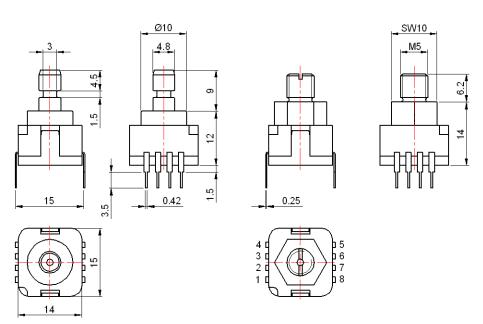

All dimensions in mm

AS SEN PD 2009-08-03



# Gauge pressure transducers

AK2 series

# **Technical data**

# **Absolute maximum ratings**

Parameter	Symbol	Conditions	Min.	Тур.	Max.	Unit	
Temperature ranges							
Storage temperature range	T <sub>st</sub>	1)	-40		+125	∞	
Operating temperature range	Ta	2)	-30		+85	∞	
Soldering temperature	T <sub>solder</sub>	<5 s (no reflow soldering)			+240	∞	
Supply voltage /-current			•				
Supply voltage	$V_{DD}$	5)			10	V	

Parameter	Symbol	Conditions	Min.	Тур.	Max.	Unit	
Offset / bridge resistance @ T <sub>a</sub> = 2	5 °C, V <sub>DD</sub> = 5	V					
Bridge resistance	Rs	Chip type C41 (pin1-3)	4.0	5.0	6.0	kΩ	
		Chip type C27 (pin1-3)	2.6	3.3	4.0	kΩ	
		Chip type C28 (pin1-3)	2.7	3.2	3.7	kΩ	
Offset	V <sub>0</sub>	6)	-25	0	+25	mV	
Data in temperature range @ T <sub>a</sub> = -	-30 85 °C, '	V <sub>DD</sub> = 5 V				·	
Temperature hysteresis		9)		±0.1	±0.5	% FS	
Temperature coefficients of the	$\alpha_{Rs}$	10)	2.1	2.4	2.7	10 <sup>-3</sup> /K	
bridge resistance	$\beta_{Rs}$		4	6	8	10 <sup>-6</sup> /K <sup>2</sup>	
Temperature coefficients of the	αs	11)	-2.4	-2.2	-2.0	10 <sup>-3</sup> /K	
sensitivity	βs		3	5	8	10 <sup>-6</sup> /K <sup>2</sup>	
Temperature coefficient of offset	TCV <sub>0</sub>	12)		±4		μV/VK	

# Data dependent on rated pressure @ $T_a = 25 \, ^{\circ}C$ , $V_{DD} = 5 \, V$


Rated pressure p <sub>r</sub> 3)	Chip type		Sensitivity S	S <sup>7)</sup>	Nonline	earity L 8)	Overpressure pov 4)
bar		Min. mV/bar	Typ. mV/bar	Max. mV/bar	Typ. % FS	Max. % FS	Min. bar
0.025	C41	640	1000	1280	±1	±1.75	0.25
0.060	C41	450	700	833	±0.75	±1.5	0.35
0.100	C27	350	500	700	±0.5	±1	0.5
0.250	C27	300	400	480	±0.5	±1	0.6
0.400	C27	225	300	375	±0.5	±1	1
1.000	C27	90	120	150	±0.25	±0.5	3
2.500	C28	36	48	60	±0.25	±0.5	5
6.000	C28	15	20	25	±0.25	±0.5	9
10.00	C28	9	12	15	±0.25	±0.5	24
25.00	C28	3.6	4.8	6	±0.25	±0.5	37.5



# Gauge pressure transducers

**AK2 series** 

# **Terminal assignment**

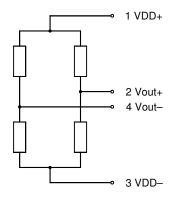

Pin	Symbol	Terminal assignment
1	$V_{DD+}$	Supply voltage
2	$V_{out+}$	Output voltage
3	$V_{DD-}$	Supply voltage
4	V <sub>out-</sub>	Output voltage

The polarity of  $V_{\text{out}}$  applies to positive pressure. Negative pressure or a reversed supply voltage results in a reversed polarity of the output voltage  $V_{\text{out}}$ .

# Rated pressures and ordering codes

Туре	Type KD												Туре	e KC										
Rated pressure p <sub>r</sub> bar	0.025	090.0	0.100	0.250	0.400	1.000	2.500	000.9	10.00	25.00	0.025	090.0	0.100	0.250	0.400	1.000	2.500	000.9	10.00	25.00				
Product type	AKR 0.025 D20	AKR 0.060 D20	AKR 0.100 D40	AKR 0.250 D40	AKR 0.400 D40	AKR 1.000 D40	AKR 2.500 D80	AKR 6.000 D80	AKR 10.00 D80	AKR 25.00 D80	AKR 0.025 C20	AKR 0.060 C20	AKR 0.100 C40	AKR 0.250 C40	AKR 0.400 C40	AKR 1.000 C40	AKR 2.500 C80	AKR 6.000 C80	AKR 10.00 C80	AKR 25.00 C80				
Ordering code	B58611K1100A001	B58611K1100A002	B58611K1100A003	B58611K1100A004	B58611K1100A005	B58611K1100A006	B58611K1100A007	B58611K1100A008	B58611K1100A009	B58611K1100A010	B58611K1500A007	B58611K1500A008	B58611K1500A009	B58611K1500A010	B58611K1500A011	B58611K1500A012	B58611K1500A013	B58611K1500A014	B58611K1500A015	B58611K1500A016				

Other rated pressures upon request.



## Gauge pressure transducers

AK2 series

## Symbols and terms

### 1) Storage temperature range T<sub>st</sub>

A storage of the pressure sensor within the temperature range  $T_{st,min}$  up to  $T_{st,max}$  and without applied pressure and supply voltage will not affect the performance of the pressure sensor.

### 2) Operating temperature range T<sub>a</sub>

An operation of the pressure sensor within the temperature range  $T_{a,min}$  up to  $T_{a,max}$  will not affect the performance of the pressure sensor.

#### 3) Rated pressure pr

Within the rated pressure range 0 up to p<sub>r</sub> the signal output characteristic corresponds to this specification.

#### 4) Overpressure pov

Pressure cycles within the pressure range 0 up to pov will not affect the performance of the pressure sensor.

#### 5) Supply voltage V<sub>DD</sub>

 $V_{DD,max}$  is the maximum permissible supply voltage, which can be applied without damages. The output voltage  $V_{out}$  is ratiometric ( $V_{out} \sim V_{DD}$ ).

#### 6) Offset V<sub>0</sub>

The offset  $V_0$  is the signal output  $V_{out}(p = 0)$  at zero pressure.

#### 7) Sensitivity S

Within the pressure range 0 up to  $p_r$  the output voltage is  $V_{out}(p_x) = V_0 + S \cdot p_x$ 

#### Nonlinearity L (including pressure hysteresis)

The nonlinearity is the deviation of the real sensor characteristic  $V_{out}$  = f(p) from the ideal straight line. It can be approximated by a polynomial of second order, with the maximum at  $p_x = p_r / 2$ .

The equation to calculate the nonlinearity is:

$$L = \frac{V_{out}(p_x) - V_0}{V_{out}(p_r) - V_0} - \frac{p_x}{p_r}$$

## 9) Temperature hysteresis

The temperature hysteresis is the change of offset, starting from the value at 25 °C after a temperature change and return to 25 °C. Determined during temperature cycles in operating temperature range (cycles with 1 K/min). (Full Scale):  $FS = V_{FS} = S \cdot p_r$ 

# $^{10)}$ Temperature coefficients of the bridge resistance $\alpha_{RS},\,\beta_{RS}$

Bridge resistance at temperature  $T_x$ :  $R_S(T_x) = R_S(25 \, ^{\circ}\text{C}) \cdot [1 + \alpha_{RS} \cdot (T_x - 25 \, ^{\circ}\text{C}) + \beta_{RS} \cdot (T_x - 25 \, ^{\circ}\text{C})^2]$  Values are valid within the operating temperature range  $T_{a,min}$  up to  $T_{a,max}$ 

Out of the operating temperature range, the deviation may increase.

# $^{11)}$ Temperature coefficients of the sensitivity $\alpha_{S},\,\beta_{S}$

Sensitivity at temperature  $T_x$ :  $S(T_x) = S(25 ^{\circ}C) \cdot [1 + \alpha_S \cdot (T_x - 25 ^{\circ}C) + \beta_S \cdot (T_x - 25 ^{\circ}C)^2]$ 

Values are valid within the operating temperature range T<sub>a,min</sub> up to T<sub>a,max</sub>

Out of the operating temperature range, the deviation may increase.

# $^{12)}$ Temperature coefficient of offset TCV $_{0}$

Offset at temperature T<sub>x</sub>:  $V_0(T_x) = V_0(25~\text{°C}) + \text{TCV}_0 \cdot (T_x - 25~\text{°C}) \cdot V_{DD}$ 

Values are valid within the operating temperature range T<sub>a,min</sub> up to T<sub>a,max</sub>

Out of the operating temperature range, the deviation may increase.



## Gauge pressure transducers

AK2 series

### **Cautions and warnings**

#### Storage (general)

All pressure sensors should be stored in their original packaging. They should not be placed in harmful environments such as corrosive gases nor exposed to heat or direct sunlight, which may cause deformations. Similar effects may result from extreme storage temperatures and climatic conditions. Avoid storing the sensor dies in an environment where condensation may form or in a location exposed to corrosive gases, which will adversely affect their performance. Plastic materials should not be used for wrapping/packing when storing or transporting these dies, as they may become charged. Pressure sensor dies should be used soon after opening their seal and packaging.

#### Operation (general)

Media compatibility with the pressure sensors must be ensured to prevent their failure. The use of other media can cause damage and malfunction. Never use pressure sensors in atmospheres containing explosive liquids or gases.

Ensure pressure equalization to the environment, if gauge pressure sensors are used. Avoid operating the pressure sensors in an environment where condensation may form or in a location exposed to corrosive gases. These environments adversely affect their performance.

If the operating pressure is not within the rated pressure range, it may change the output characteristics. This may also happen with pressure sensor dies if an incorrect mounting method is used. Be sure that the applicable pressure does not exceed the overpressure, as it may damage the pressure sensor.

Do not exceed the maximum rated supply voltage nor the rated storage temperature range, as it may damage the pressure sensor.

Temperature variations in both the ambient conditions and the media (liquid or gas) can affect the accuracy of the output signal from the pressure sensors. Be sure to check the operating temperature range and thermal error specification of the pressure sensors to determine their suitability for the application.

Connections must be wired in accordance with the terminal assignment specified in the data sheets. Care should be taken as reversed pin connections can damage the pressure transmitters or degrade their performance. Contact between the pressure sensor terminals and metals or other materials may cause errors in the output characteristics.

#### Design notes (dies)

This specification describes the mechanical, electrical and physical requirements of a piezoresistive sensor die for measuring pressure. The specified parameters are valid for the pressure sensor die with pressure application either to the front or back side of the diaphragm as described in the data sheet. Pressure application to the other side may result in differing data. Most of the parameters are influenced by assembly conditions. Hence these parameters and the reliability have to be specified for each specific application and tested over its temperature range by the customer.

#### Handling/Mounting (dies)

Pressure sensor dies should be handled appropriately and not be touched with bare hands. They should only be picked up manually by the sides using tweezers. Their top surface should never be touched with tweezers. Latex gloves should not be used for handling them, as this will inhibit the curing of the adhesive used to bond the die to the carrier. When handling, be careful to avoid cuts caused by the sharp-edged terminals. The sensor die must not be contaminated during manufacturing processes (gluing, soldering, silk-screen process).

The package of pressure sensor dies should not to be opened until the die is mounted and should be closed after use. The sensor die must not be cleaned. The sensor die must not be damaged during the assembly process (especially scratches on the diaphragm).

## Soldering (transducers, transmitters)

The thermal capacity of pressure sensors is normally low, so steps should be taken to minimize the effects of external heat. High temperatures may lead to damage or changes in characteristics.

A non-corrosive type of flux resin should normally be used and complete removal of the flux is recommended. Avoid rapid cooling due to dipping in solvent. Note that the output signal may change if pressure is applied to the terminals during soldering.

This listing does not claim to be complete, but merely reflects the experience of EPCOS AG.



### Important notes

The following applies to all products named in this publication:

- 1. Some parts of this publication contain statements about the suitability of our products for certain areas of application. These statements are based on our knowledge of typical requirements that are often placed on our products in the areas of application concerned. We nevertheless expressly point out that such statements cannot be regarded as binding statements about the suitability of our products for a particular customer application. As a rule, EPCOS is either unfamiliar with individual customer applications or less familiar with them than the customers themselves. For these reasons, it is always ultimately incumbent on the customer to check and decide whether an EPCOS product with the properties described in the product specification is suitable for use in a particular customer application.
- 2. We also point out that in individual cases, a malfunction of electronic components or failure before the end of their usual service life cannot be completely ruled out in the current state of the art, even if they are operated as specified. In customer applications requiring a very high level of operational safety and especially in customer applications in which the malfunction or failure of an electronic component could endanger human life or health (e.g. in accident prevention or life-saving systems), it must therefore be ensured by means of suitable design of the customer application or other action taken by the customer (e.g. installation of protective circuitry or redundancy) that no injury or damage is sustained by third parties in the event of malfunction or failure of an electronic component.
- 3. The warnings, cautions and product-specific notes must be observed.
- 4. In order to satisfy certain technical requirements, some of the products described in this publication may contain substances subject to restrictions in certain jurisdictions (e.g. because they are classed as hazardous). Useful information on this will be found in our Material Data Sheets on the Internet (www.epcos.com/material). Should you have any more detailed questions, please contact our sales offices.
- 5. We constantly strive to improve our products. Consequently, the products described in this publication may change from time to time. The same is true of the corresponding product specifications. Please check therefore to what extent product descriptions and specifications contained in this publication are still applicable before or when you place an order. We also reserve the right to discontinue production and delivery of products. Consequently, we cannot guarantee that all products named in this publication will always be available. The aforementioned does not apply in the case of individual agreements deviating from the foregoing for customer-specific products.
- 6. Unless otherwise agreed in individual contracts, all orders are subject to the current version of the "General Terms of Delivery for Products and Services in the Electrical Industry" published by the German Electrical and Electronics Industry Association (ZVEI).
- 7. The trade names EPCOS, BAOKE, Alu-X, CeraDiode, CSMP, CSSP, CTVS, DSSP, MiniBlue, MiniCell, MKK, MLSC, MotorCap, PCC, PhaseCap, PhaseCube, PhaseMod, PhiCap, SIFERRIT, SIFI, SIKOREL, SilverCap, SIMDAD, SIMID, SineFormer, SIOV, SIP5D, SIP5K, ThermoFuse, WindCap are trademarks registered or pending in Europe and in other countries. Further information will be found on the Internet at www.epcos.com/trademarks.